MANOMAY


4G PROTECT PRO DUAL

Dual Lens Mini Pan-Tilt Camera



USER MANUAL

In The Box

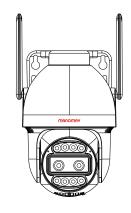

Dome Camera x 1no.




12V DC Power Adapter






Screw Pouch x 1 User Manual Card x 1no.

1. 3MP 4G Protect Dual Mini Pan-Tilt Camera

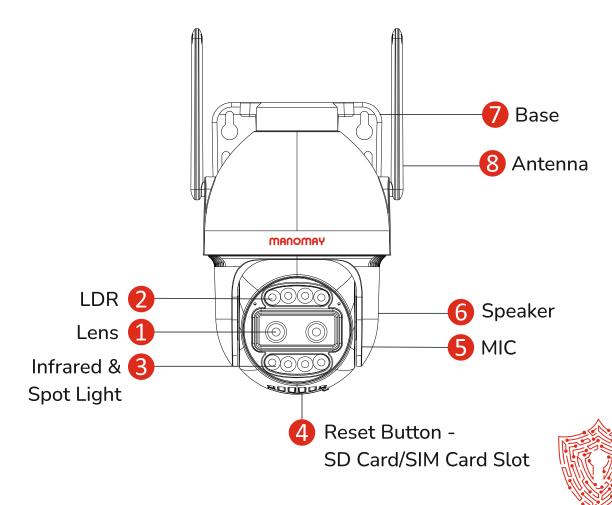


Interface Description

1. 3MP 4G Protect Dual Mini Pan-Tilt Camera

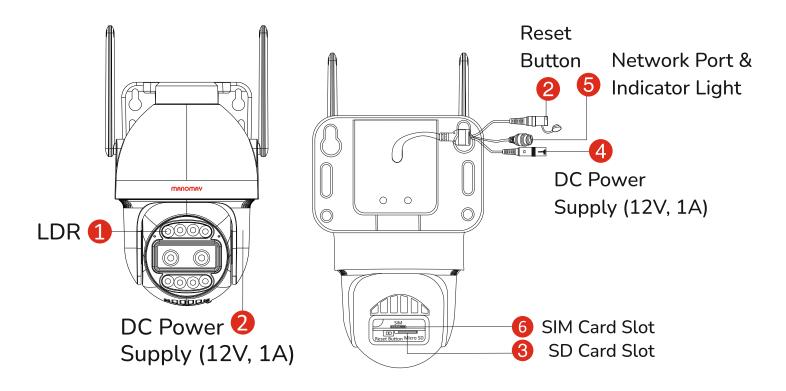

Interface Description

1. 3MP 4G Protect Dual Mini Pan-Tilt Camera

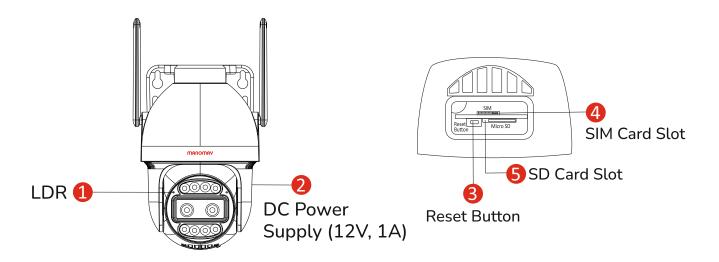



Description

1. Light Sensor: The light sensor detects the ambient luminance.

The infrared light will be turned on when lux level

drops below 3.

2. Reset Button: During the working state of device, press the Reset

Button for 3-5 seconds. This will restore the factory default settings of the camera once you hear voice

prompt annunciation.

3. SD Card Slot: Insert SD Card for video storage.

4. DC Power Input: Connect 12V, 1A DC Power Supply

5. SIM Card Slot: Insert 4G SIM Card.

4G Camera Cable Light Status:

1. Slow Flashing: If the 4G module or SIM card is abnormal, the light

flashes once every 2s.

2. Fast Flashing : If the 4G Signal is poor or not available the light

flashes once every 0.5s.

3. Steady On: If the network is normal the light is on continuously.

• APP Download and Installation:

Users can search "Manomay App" on APP Store or PlayStore. You can also install the app by scanning the below QR codes.



Android App





Manomay iOS App

Note: The app requires iOS 9.0 version / Android 5.0 or above

Software Installation

• Account Login:

On the Login interface, input account/ phone number/email, & the corresponding password, and click the "OK" button to log in.


You can also login through OTP.

Third-party login: "Manomay App" supports third-party login. Click Experience it icon to jump to the "Manomay App" and complete the authorization and log in.



Installing the SIM Card

 When the device is powered OFF, Insert a 4G SIM card that can access the internet into the device;

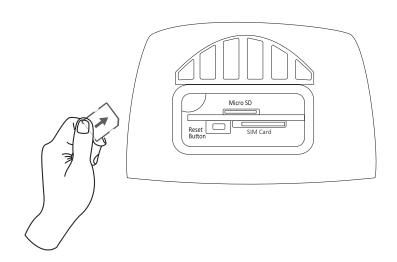


Note: Please check the SIM & SD card slots and insert the SIM and SD card in proper positions and directions. Make sure the SIM card is activated with an appropriate data plan.



Adding the Camera in App


1. Open the APP and click on the "+" icon on the upper right corner to enter the scan code interface

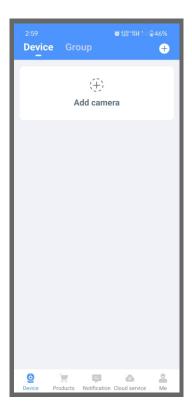

3. Scan the QR code available on the camera



2. Click on Scan to Add

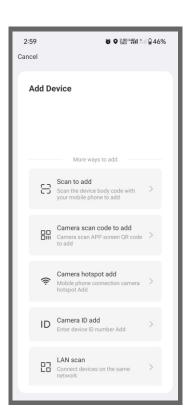


4. On the search device interface






5. Please wait patiently while the device get configure.

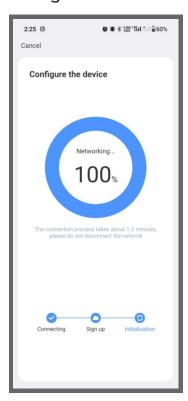

6. Set the name for your device. click on confirm to "ADD" the device successfully

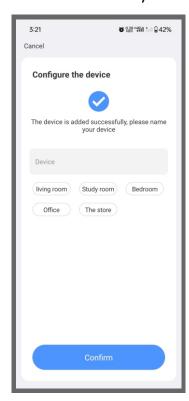


7. After set the device name click on finished



When the QR code on the device is not available or does not work follow the below instructions.

1. Click on "Camera ID ADD"

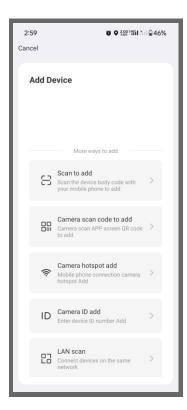

2. Enter the device ID and password and click on confirm to "ADD" the device successfully






Installation Method

1. 3MP 4G Protect Dual Mini Pan-Tilt Camera

Wall Installation

- 1) Use the camera positioning proper to locate and punch holes. Insert the rubber plugs.
- 2) Align the hole of the camera bracket with the rubber plugs and fasten the bracket to the wall.

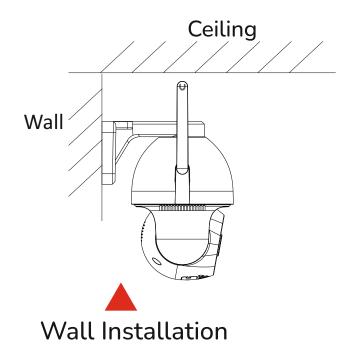

PIR is sensitive to hot and cold disturbances,

Please note:

Avoid installing the camera where the air flow is agitated. For eg: the air outlet of the air conditioner, the heat dissipation port of the equipment, the side of the fan, the vicinity of the curtain, etc.Please do not install the camera in front of the glass or mirror. The height of the camera installation should be 2.5M-3M, the best distance of PIR trigger.

Do not install the camera upside down.




WARNING



In case of fire or lighting, please don't put product in damp and raining place. Operate or maintain only according to the user manual.



Be careful when you see an attachment with the Dangerous Voltage Sign which might cause serious electric accident

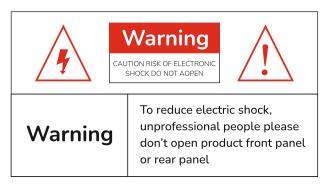

Warning

In case of electric shock and fire Please don't use power supply beyond power list in user manual

Notice

- 1. Ensure your equity, Please read the user manual carefully before you use the product
- 2. Please contact professional people if you need install and maintain the product.
- 3. Working Environment : temperature of -20°C~+60°C, relative humidity under 85%
- 4. Please do not exceed the standard range of temperature, humidity and voltage as suggested in the user manual.

